

## **Program Your Westel Remote To Your TV (DVR Remote)**

1. Turn on your TV
2. With the Westel remote, press TV button once, it will flash once.
3. Press & hold SETUP button....TV button will flash once & then 2 quick flashes
4. Type 991
5. Press POWER button
6. Press & release the CH up (CH +) button repeatedly, do this step kind of slowly. Then stop when the TV turns off. Be patient, this may take several minutes to find the correct code.
7. Press & hold SETUP button...TV button will flash & then 2 quick flashes
8. Press TV button again
9. Press & hold SETUP button...TV button will flash once & the 2 quick flashes
10. Lock Master Power...press 995, then press POWER, then press TV, then press & hold SETUP button until the TV button flashes twice
11. Press STB button
12. Press & hold SETUP button...STB button will flash once & then 2 quick flashes
13. If you don't get it programmed the first time, you can start over with the instructions

## **Big Button Remote (New)**

1. Press and Hold the SETUP button until it blinks twice
2. Press the TV POWER Key
3. Press and hold down the OK/SELECT Key
4. Let go of the OK/SELECT Key when the TV turns off.